

Certificate of Achievement

**THIS CERTIFICATE IS PROUDLY
PRESENTED FOR HONOURABLE ACHIEVEMENT TO**

AWARDED THIS DAY OF _____

Name of The Student Neeraj Singh

Roll no. _____ Class B.TECH CS- Sec-24, P2

Examination Center _____

Date of the Practical Examination _____

AFFIX YOUR PASSPORT
SIZE PHOTO HERE

Signature

Remarks: _____

Neeraj singh p2 bee lab

S.NO	Resistor	Colour band	Calculated value of $R(\Omega)$	measured value of $R(\Omega)$ (actual value)	Remark
1.	R_1	Brown Red orange Silver	$11.82 \text{ K}\Omega$	$12 \times 10^3 \pm 10\% \Omega$	
2.	R_2	Red Red orange gold	$21.90 \text{ K}\Omega$	$22 \times 10^3 \pm 5\%$	
3.	$R_1 \text{ and } R_2$		$34 \text{ K}\Omega$	$34 \times 10^3 \text{ K}\Omega$	(Series)
4.	$R_1 \text{ and } R_2$		$7.66 \text{ K}\Omega$	$7.6 \times 10^3 \text{ K}\Omega$	(parallel)

Experiment: 1

Date 20.1.22

Page No. 2

Experiment - 1

Objective: To familiarize with measuring and testing equipments like multimeter / CRO, Function generator, Power supply etc and also familize with bread board, resistor, capacitor etc calculate the Resistance value according to colour.

Experiment : 2A

Date _____

Page No. 3

Aim : To verify the Kirchhoff's current law (KCL)

Objective : The objective of this lab activity is to verify Kirchhoff's current law (KCL) using mesh and nodal analysis of the given circuit.

Theory : According to Kirchhoff's current law, in any network of wires carrying current, the algebraic sum of all current meeting at a junction is zero.

apparatus required :- Regulated Power DC supply, PMMC Ammeter, Resistance / rheostat, Connecting wire.

Observation


S.No.	Reading of ammeter $A_1 (I_1)$	Reading of ammeter $A_2 (I_2)$	Reading ammeter of A_3	$I_2 + I_3$

Working principle

The algebraic sum of current in a network of conductors meeting a point is zero. Recalling that current is a signed quantity reflecting direction towards or away from node;

$$\sum_{k=1}^N I_k = 0$$

Experiment: Verification of Kirchhoff's V

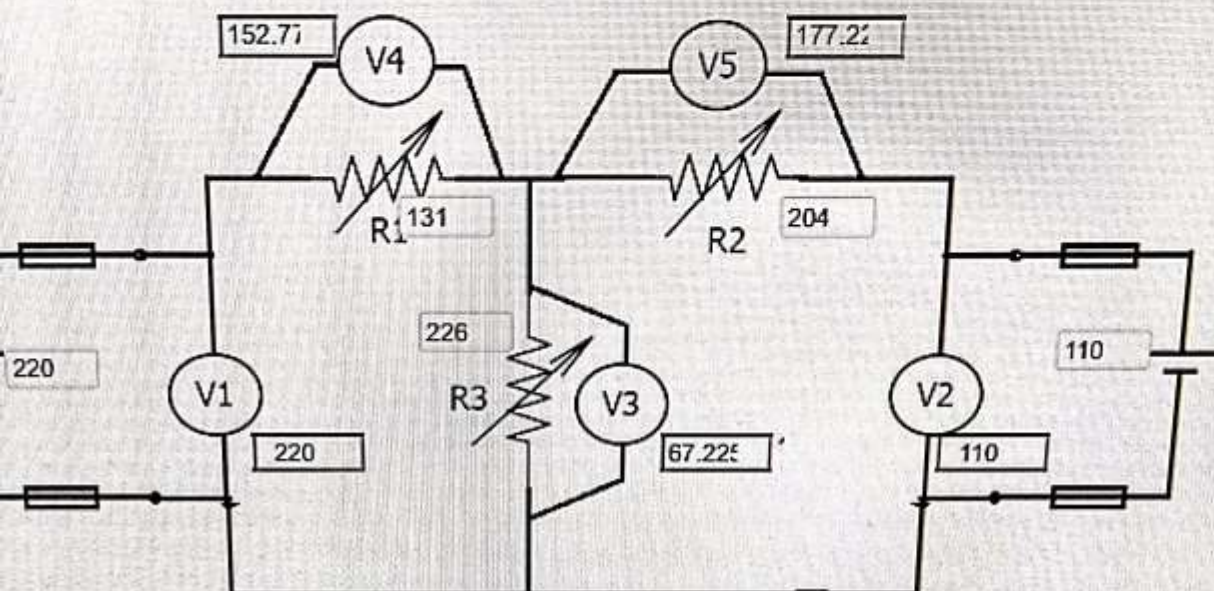

Input the value
Then click on

Observation Table

SL No.	Voltmeter Readings					Verification of KVL	
	V1	V2	V3	V4	V5	V2+V4	-V3+V4
1	220	152.30769	177.69230	67.692307	110	219.99999	110.00000
2	220	153.86525	176.13474	66.134741	110	219.99999	110.00000
3	220	161.55578	168.44421	58.444218	110	220	109.99999
4	220	157.71768	172.28231	62.282310	110	220.00000	109.99999
5	220	152.77407	177.22592	67.225921	110	220.00000	109.99999

[Click here to print](#)

Experiment :

Date _____

Page No. _____

N is the total no. of branches.

Result

- 1) calculate the ideal voltage and current for each element in the circuit and compare them to the measured values
- 2) compare the percentage error in the measurements and provide a brief explanation for the error.

Precaution :

- all connections should be tight
- all steps should be followed carefully.

Experiment : 2B

Date _____

Page No. _____

Aim: to verify the Kirchhoff voltage law (KVL)

Objective: The objective of this lab activity is to verify Kirchhoff's voltage (KVL) using mesh and nodal analysis of the circuit.

Theory:- according to Kirchhoff's voltage law, in any closed or mesh, the algebraic sum of emf acting on circuit is equal to the algebraic sum of the product of the current and resistance of each part of the circuit.

apparatus req: Regulated power DC supply, PMMC Voltmeters, Resistance, connecting wire.

Observation

S.No.	Reading (V_1)	(V_2)	(V_3)	(V_4)	$V = V_1 + V_2$	$V_2 = V_3 + V_4$

principle:- The sum of the emf in any closed loop is equivalent to the sum of the potential drop in that loop.


$$\sum_{k=1}^n V_k = 0$$

SSTIME

16:49

Verification of Norton's Theorem

Experiment: Verification of Kirchhoff's Voltage

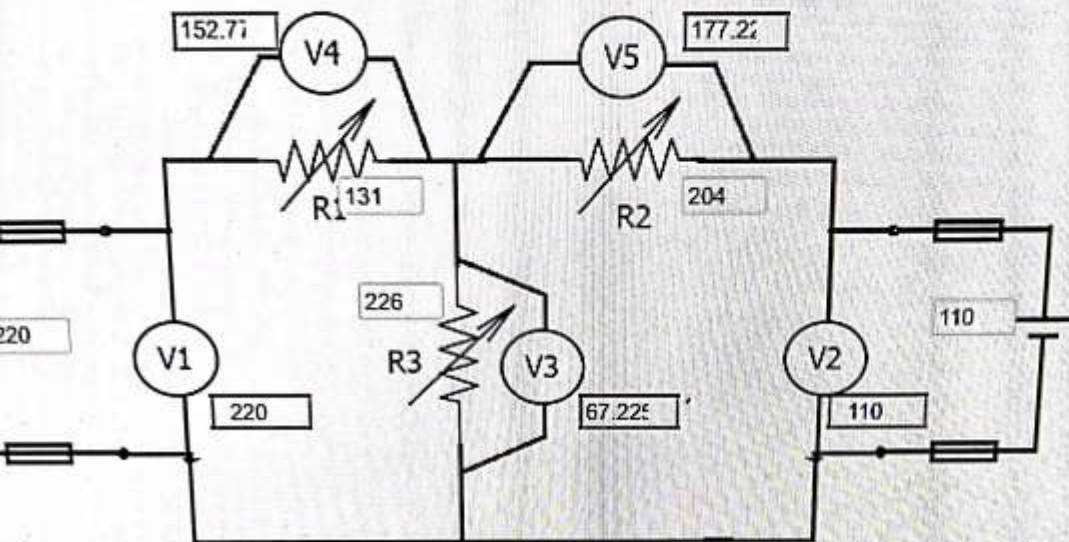

Control

Input the values of Voltage
Then click on Run.

Run

Observation Table

SL No.	Voltmeter Readings					Verification of KVL	
	V1	V2	V3	V4	V5	V2+V4	-V3+V4
1	220	152.30769	177.69230	67.692307	110	219.99999	110.00000
2	220	153.86525	176.13474	66.134741	110	219.99999	110.00000
3	220	161.55578	168.44421	58.444218	110	220	109.99999
4	220	157.71768	172.28231	62.282310	110	220.00000	109.99999
5	220	152.77407	177.22592	67.225921	110	220.00000	109.99999

[Click here to print](#)

Experiment :

Date _____

Page No. _____

Result:

- ① calculate the ideal voltage - and current for each element in the circuit and compare them to the measured values
- ② compare the percentage error in the two measurements and provide a brief explanation for the error.

precaution

- all connection should be tight
- all steps should be followed carefully

Aim : to verify the norton theorem

apparatus req:- two regulated DC power, P.M.M / voltmeter, P.M.M / ammeter, resistance / rheostats, connecting wire.

Theory:- according to theorem if a resistor of R_L ohms be connected b/w any two terminals of a linear bilateral network, then the resulting current through load resistor will be equal to $\frac{R_{th} I_s}{R_L + R_{th}}$.

Observation

S.No	Short circuit current load terminal (I_{sc})	Equivalent resistance across the load	load current $I = \frac{R_{th} I_{sc}}{R_L + R_{th}}$	Measured I_L

Calculation:-
$$I_L = \frac{R_{th} I_{sc}}{R_L + R_{th}}$$

Script alerts in your browser.

resistances (R_1 , R_2 , R_3 & R_L) close to their maximum values. Choose any arbitrary values of V_1

Part Select:

Switch S_1 to Power and S_2 to Load and Simulate the circuit from Case 1 tab. Observe the result of load current.

Short circuit current analysis:

Switch S_1 to power and S_2 to Short and Simulate the circuit and read Norton short circuit current (I_{sc}) from Case

Resistance analysis:

Switch S_1 to short and S_2 to power and Simulate the circuit and read Norton resistance (R_n) from Case 2(b) tab.

Using I_{sc} and R_n determine Load Current


Simulate the program and read Load current (I_L) from Case 3

Compare the load currents (I_L) obtained from Case 1 tab. Click the button to fill the data to the observation table.

Moving Coil.

DT- Double pole Double throw.

All the resistances are in ohms.

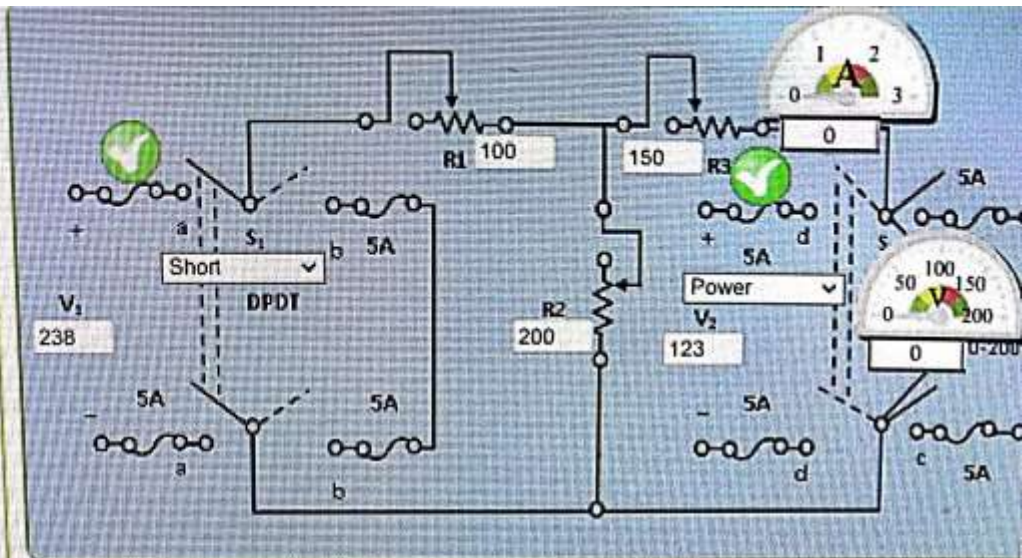


Case 1

Case 2(a)

Case 2(b)

Case 3

Click on simulate to get the Load Current (I_L) from the Thevenin equivalent parameter of the above ckt.

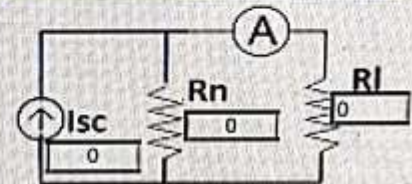

Load Current (I_L) :

0

Simul

Fill data to t

Observation Table:

Serial no. of Observation	Load Current (I_L) from case 1	Load Voltage (V_L)	Load Resistance (R_L) = V_L / I_L	Norton current (I_{sc}) from case 2(a)	2nd Voltage source (v) from case 2(b)	Ammeter Reading (I) from case 2(b)	Norton Resistance $R_n = V/I$	Load (I_L) = $I_{sc} \cdot R$
1st	0.28387	85.161	300	0.67692	110	0.50769	216.67	0.2
2nd	0.29677	89.031	300	0.70769	115	0.53077	216.67	0.2
3rd	0.30710	92.130	300	0.73231	123	0.56769	216.67	0.3
4th	0.30710	92.130	300	0.73231	123	0.56769	216.67	0.3
5th								

Experiment :

Date _____

Page No. _____

Result and Discussion

The value of short circuit I_{sc} is _____ Amp

The value of norton resistance is _____ Ω

It will be found that measured value of current through flowing through the load I_L is the same as determined by norton's theorem.

Precaution

- all connection should be tight
- all steps should be following carefully
- Reading and calculation should be taken carefully
- don't touch the live terminal

Aim: to verify the Thevenin's Theorem

apparatus required : two regulated DC Supply, P.M.M.C voltmeter, P.M.M.C ammeter, Resistances, connecting wires.

Theory: according to this theorem if a resistor of R_L ohms be connected b/w any two terminals of a linear bilateral network, then the resulting current through load resistor will be equal to $\frac{V_{th}}{R_L + R_{th}}$ where V_{th} is pot. diff.

Observation

S.No	open circuit voltage R_L	R_{th}	$I_L = \frac{V_{th}}{R_L + R_{th}}$	Measured I_L

Precaution

- all connection should be tight
- all steps should be followed carefully
- Don't touch the live material

Verification of Thevenin's Theorem

Procedure:

Step 1: Set all the resistances (R_1, R_2, R_3, R_L) close to their respective maximum values. Choose any arbitrary values of V_1 and V_2 .

Experiment Part Select:


Case 1: Select switch of S_1 to Power and S_2 to load. Simulate the program. Observe the result from Table 1.

Case-2: **Thevenin Voltage analysis:**
Select switch S_1 to power and S_2 to intermediate. Simulate the program. Read Thevenin voltage (V_{th}) from Case 2 tab.

Thevenin Resistance analysis:
Select switch S_1 to short and S_2 to power. Simulate the program. Read Thevenin resistance (R_{th}) from Case 2 tab.

Case-3: Using V_{th} and R_{th} determine Load Current:
Specify the load resistance in case of the result table as the load resistance entered in the main circuit. Simulate the program. Read Load current (I_L) from Case 3 tab. Compare load currents (I_L) obtained from above two cases.

Moving Coil.
DPDT: Double pole Double throw.
Note: All the resistances are in ohms.

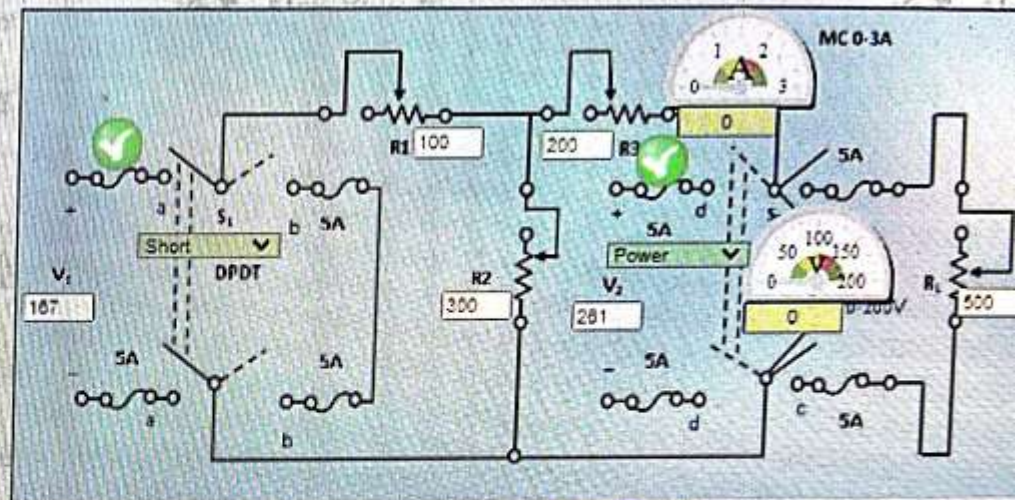

Case 1
Case 2(a)
Case 2(b)
Case 3

Click on simulate to get the Load Current (I_L) from the Thevenin equivalent parameter of the above circuit.

Load Current (I_L) : 0

Simulate

Fill data to the table

Observation Table:

Sl. No. of Observation	Load Current (I_L) from case 1	Load Voltage (V_L)	Load Resistance ($R_L = V_L / I_L$)	Thevenin Voltage (V_{th}) from case 2(a)	2nd Voltage source (V) for case 2(b)	Ammeter Reading (I) from case 2(b)	Thevenin Resistance $R_{th} = V_{th} / I$	Load current ($I_L = V_{th} / (R_{th} + R_L)$)
1	0.10845	63.225	500	82.500	220	0.80000	275.00	0.10845
2	0.11613	68.065	500	90.000	230	0.83636	275.00	0.11613
3	0.13452	67.26	500	104.25	239	0.86909	275.00	0.13452
4	0.15000	75	500	110.25	260	0.90909	275.00	0.15000
5	0.16161	80.805	500	125.25	261	0.94809	275.00	0.16161

... R_1, R_2, R_3, R_L close to their maximum values. Choose any arbitrary values of

Part Select:

of S_1 to Power and S_2 to load. Simulate the circuit and observe the result from Table 1.

Voltage analysis:

Set S_1 to power and S_2 to intermediate. Simulate the circuit and observe the result from Table 1. Thevenin voltage (V_{th}) from Case 2 tab.


Resistance analysis:

Set S_1 to short and S_2 to power. Simulate the circuit and observe the result from Table 1. Thevenin resistance (R_{th}) from Case 2 tab.

V_{th} and R_{th} determine Load Current:

Set S_1 to power and S_2 to load. Simulate the circuit and observe the result from Table 1. Load current (I_L) from Case 3 tab. Compare the load current (I_L) obtained from above two cases.

Double throw.
Resistances are in ohms.

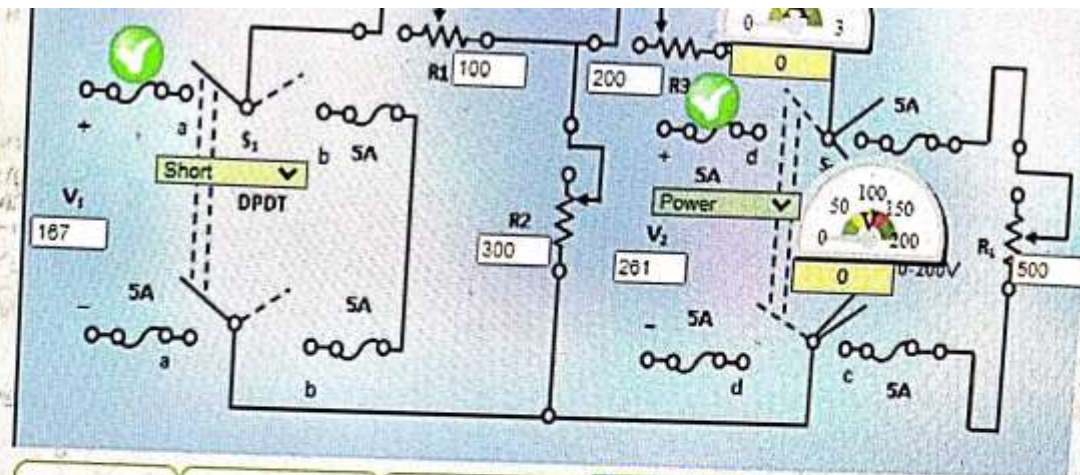

Case 1
Case 2(a)
Case 2(b)
Case 3

Click on simulate to get the Load Current(I_L) from the Thevenin equivalent parameter of the above circuit.

Load Current(I_L) :

R_{th}
0

V_{th}
0

R_L
0

0

Simulate

Fill data to the table

Table:

Current(I_L) from case 1	Load Voltage(V_L)	Load Resistance (R_L)= V_L/I_L	Thevenin Voltage(V_{th}) from case 2(a)	2nd Voltage source(v) for case 2(b)	Ammeter Reading(I) from case 2(b)	Thevenin Resistance $R_{th}=V_{th}/I$	Load current (I_L)= $V_{th}/(R_{th}+R_L)$
0.10845	53.225	500	82.500	220	0.80000	275.00	0.10845
0.11613	58.065	500	90.000	230	0.83636	275.00	0.11613
0.13452	67.26	500	104.25	239	0.85909	275.00	0.13452
0.15000	75	500	116.25	250	0.90909	275.00	0.15000
0.16161	80.805	500	125.25	261	0.94909	275.00	0.16161

Experiment : 5

Date _____

Page No. _____

Aim: to observe the given waveform and calculate its frequency, Peak value, Average value, RMS value and form factor

Theory: - Peak value = V_p

Peak to peak value = $V_{pp} = 2V_p$

Period = T [s]

frequency $f = \frac{1}{T}$ (Hz)

ω (angular freq.) = $\omega = 2\pi f$ (rad/s)

Phase = ϕ

Apparatus req: function generator, CRO

Observation:

S.No.	Sine wave	triangular wave	square wave
Peak voltage			
Time period			

Calculation: - calculate the listed electrical parameters using formula

Precaution:


all connection should be right

all steps should be followed carefully.

Full Wave Rectifier

INSTRUCTION

OSCILLOSCOPE

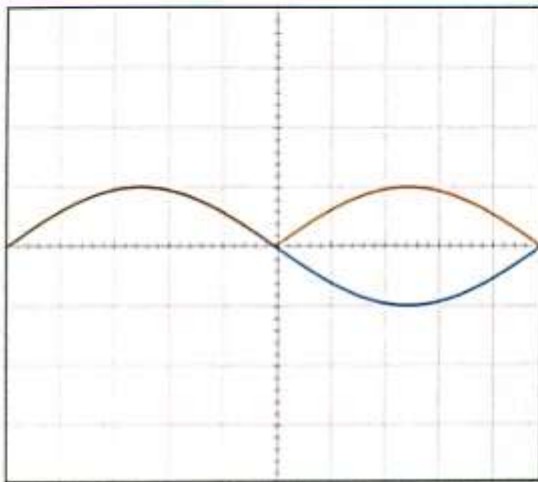

Channel 1 Channel 2 Ground Dual

1000
Frequency(Hz)

1
Amplitude(Volt)

Off

CALCULATION


$V_{rms} = \frac{V_m}{\sqrt{2}}$, V_m is the peak voltage

$V_d = \frac{2 \times V_m}{\pi}$

Ripple Factor = $\frac{V_r}{V_m}$ Since, $V_m = \sqrt{(V_{rms}^2 - V_d^2)}$

Peak Current: 0.5999999978538262 mA

CIRCUIT

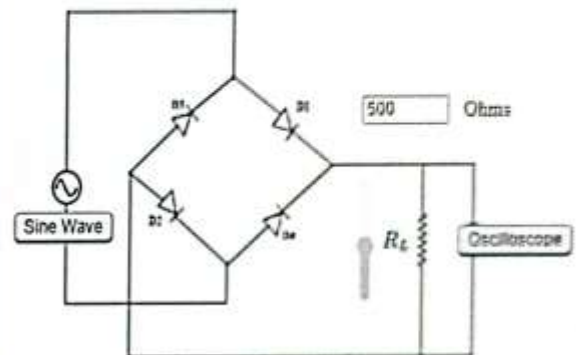

CONTROLS

Position-Y Channel 1 1 Volt(1)/div

Position-Y Channel 2 1 Volt(1)/div

Position-X 0.1 Time(10)/div

Aim: to verify the functionality of PN junction diode in forward bias and reverse bias.

Objective: To study Volt-ampere characteristics of P-N diode and also find cut-in voltage for p-n junction diode.

Theory: A PN junction diode is formed when a single crystal of semiconductor is doped with acceptor impurities on one side and donor impurities on the other side. It has two terminals called electrodes, one each from P-region and N-region. Due to two electrodes it is called Diode.

Biasing of PN junction diode.

Applying external D.C. voltage to any electronic device is called biasing. There is no current in the unbiased PN junction at equilibrium. Depending upon the polarity of the D.C. voltage externally apply to diode, the biasing is classified as forward biasing and reverse biasing.

forward bias operation: The P-N junction support uni-directional current flow. If the terminal of the input supply is connected to anode (P-side) and the other terminal of the input supply is connected to cathode, the diode is said to be forward bias.

Reverse bias operation: If a negative terminal of the input supply is connected to ~~anode~~ anode (P-side) and the other terminal of the input supply is connected to cathode (N-side) then the diode is said to be reverse biased.

Experiment :

Date _____

Page No. _____

Neeraj singh p2 bee lab

Diode current equation :

$$I = I_0 (e^{V/V_T} - 1)$$

Observation

forward bias

A.P.S Voltage (V_S)

forward voltage

across diode (V_f)

forward current through

diode I_f (mA)

Reverse Bias :

A.P.S Voltage (V_S)

Reverse voltage

V_R

Reverse current

I_f (mA)

Zener Diode - LOAD Regulator

INSTRUCTION

EXPERIMENTAL TABLE

DC Voltage (V_{DC}): 6 V Zener Voltage (V_Z): 5.1 V

Series Resistance (R_S): 0.1 K Ω

Serial No.	Load Resistance (R_L) Ohm	Load Current (I_L) mA	Zener Current (I_Z) mA	Regulated Output Voltage (V_O) V	% Voltage Regulation
1	150	34.0	0	6	40.0
2	232	22.0	0	6	30.1
3	328	15.5	0	6	23.4
4	442	11.5	0	6	18.5
5	528	9.66	0	6	15.9

CONTROLS

DC volt : Volt
 Zener Diode (V_Z) : Volt
 Resistance (R_S) : Ohms
 Resistance (R_L) : Ohms


Print It

Take another sets of Output Voltage for another Zener value

Add to Table


Plot

Clear

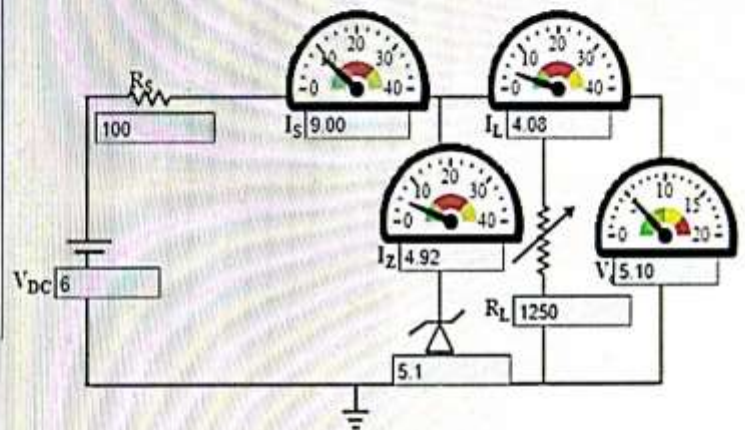

GRAPH PLOT

RI- V_O Plot

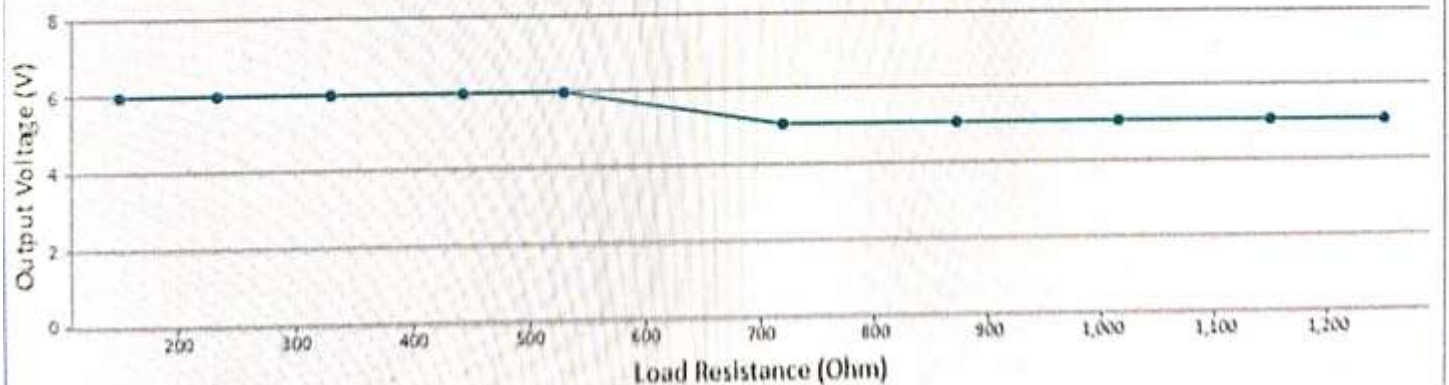

Zener Diode - LINE Regulator

INSTRUCTION

EXPERIMENTAL TABLE

Zener Voltage(V_Z): V
 Series Resistance(R_S): K Ω
 Load Resistance (R_L): K Ω

Serial No.	Unregulated supply voltage(V_S) V	Load Current(I_L) mA	Zener Current(I_Z) mA	Regulated Output Voltage(V_O) V	% Voltage Regulation
1	0	2.55	0	0	NaN
2	1.4	2.55	0	1.4	100
3	3.6	2.55	0	3.6	100
4	6.4	2.55	-1.250	5.10	83.3
5	8.6	2.55	0.950	5.10	62.5
6	11.6	2.55	3.950	5.10	45.5

CONTROLS

DC volt : Volt
 Zener Diode(V_Z) : Volt
 Resistance(R_S) : Ohms
 Resistance(R_L) : Ohms


Add to Table

Plot

Clear


Print It

Take another sets of Output Voltage for another Zener value

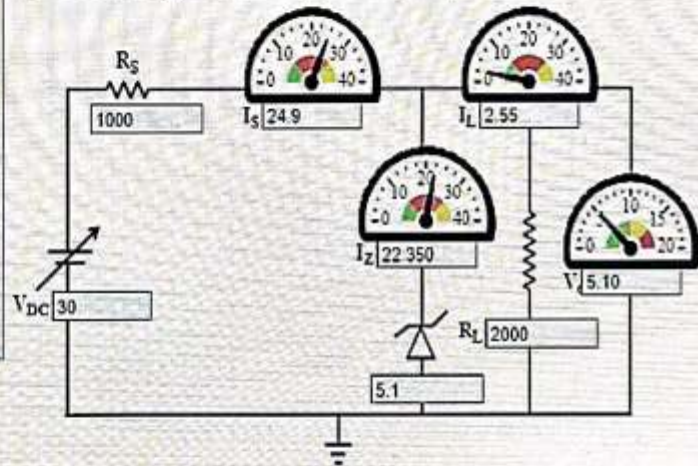

GRAPH PLOT

Vs-Vo Plot

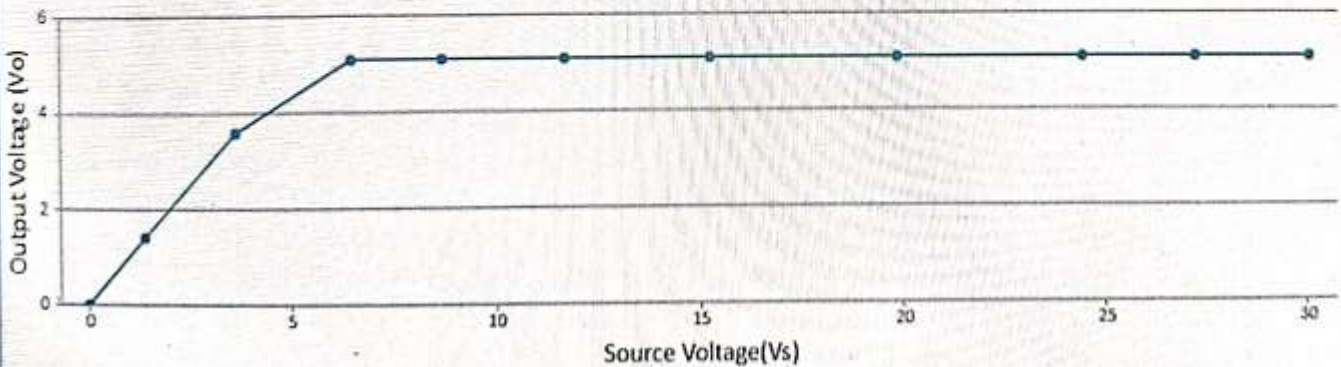

Experiment:

Neeraj singh p2 bee lab

Date _____

Page No. _____

Result:

- ① Calculate the ideal voltage and current for each element in the circuit and compare them to the measured values.
- ② Compute the percentage error in the two measurements and provide a brief explanation.

Precaution

- while doing the experiment do not exceed the reading of the diode. This may lead to damaging of the diode.
- connect voltmeter and ammeter in correct polarity as shown.

Exp-7

Aim: To plot V-I characteristics and verify the functionality the regulation action of Zener diode.

Objective: to plot the Volt-ampere characteristics of Zener diode and also find Zener Breakdown voltage in reverse biased.

Theory:

Zener diode are a special kind of diode which permits current to flow in forward direction. What makes them different from other diodes is that Zener diode will also allow current to flow in the reverse direction when the voltage is above a certain value. This break down voltage is called as the Zener voltage.

avalanche breakdown

when the diode is in the reverse bias condition, the width of the depletion region is more. If both p-side and n-type side of the diode are lightly doped, depletion region at the junction widens.

Zener breakdown

If both p-side and n-side of the diode are heavily doped, depletion region at the junction reduces compared to the width in normal doping. Applying in reverse bias causes a strong electric field to get applied across the device. As the reverse bias is increased, the electric field becomes strong enough to rupture covalent bond.

Zener diode as voltage regulator

The function of a regulator is to provide a const. output voltage to a load connected in parallel with it in spite of the ripple in the supply voltage or the variation in the load current and the zener diode will continue to regulate provided current to flow in the forward direction is normal, but will also allow it to flow in the reverse direction when the voltage is above a certain value.

observation

Result

- ① Calculate the ideal voltages and current for each element in the circuit and compare them to the measured values.
- ② compute the percentage error in the two measurement and provide a brief explanation for the error.

Precaution:

- 1) while doing the experiment do not exceed the reading of the diode
- 2) connect voltmeter and ammeter in correct polarity as shown in the circuit diagram

Experiment : 8

Date _____

Page No. _____

Aim: To study working of the half/full wave bridge rectifier and calculate its efficiency.

Objective: To verify the working of full wave rectifier circuit and calculate its efficiency.

apparatus req. CRO, Multimeter, Transformer kit, Bread Board, connecting wire, diode, Power supply.

Working: The full wave bridge rectifier circuit contains four diodes D_1, D_2, D_3, D_4 connected to form a bridge.

The ac supply to be rectified is applied to the diagonally opp. ends of the bridge through the transformer. B/w other two ends of the bridge, the load resistance R_L is connected.

Calculation: Ripple factor of FWR = $\frac{\text{ac voltage of } P/d.c.}{\text{dc voltage of } P/d.c.}$


Result:- The output dc voltage is little less than the theoretical value.

ASSTIME → There is little diff. b/w theo. and measured value of ripple factor.

Full Wave Rectifier

INSTRUCTION

OSCILLOSCOPE

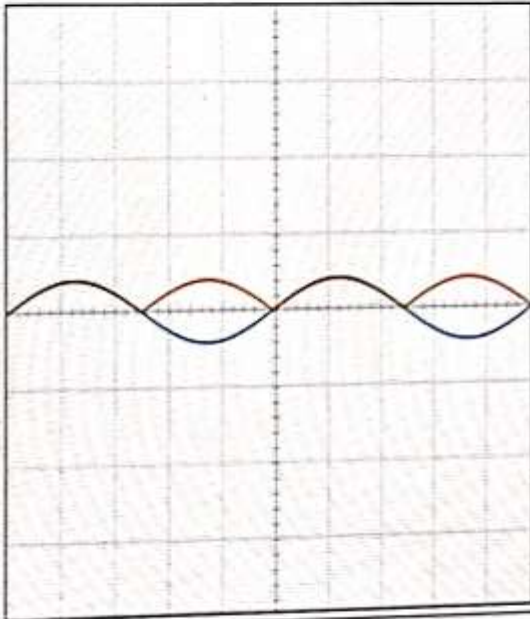

Channel 1

Channel 2

Ground

Dual

2000

Frequency(Hz)

1.3

Amplitude(Volt)

Off


CALCULATION

$$V_{rms} = \frac{V_m}{\sqrt{2}}, V_m \text{ is the peak voltage}$$

$$V_{dc} = \frac{2 \times V_m}{\pi}$$

$$\text{Ripple Factor} = \frac{V_r}{V_{dc}} \quad \text{Since, } V_{ac} = \sqrt{(V_{rms}^2 - V_{dc}^2)}$$

CIRCUIT

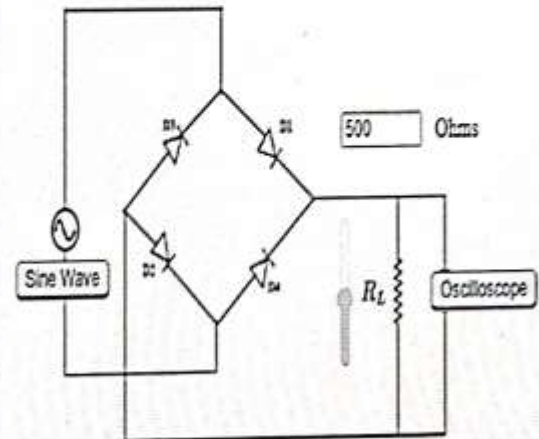

CONTROLS

